

# BATTERY CARE

## PROPER CHARGING

- ☆ When charger is first connected to vehicle the ammeter *MUST* indicate an output of 20 amps
- ☆ Always allow charger to complete full charge cycle


## PROPER WATERING

- ☆ Fluid level *MUST* be maintained above the battery plates at 1/4 - 3/8" below the bottom of the vent tube
- ☆ Use Battery Maintenance Kit P/N 25584-G01 and use only good quality water to maintain fluid level

## PROPER CLEANING

- ☆ With battery caps installed, battery cases *MUST* be cleaned periodically with a solution of water and baking soda

Fluid  
1/4" to 3/8"  
Below Vent Tube

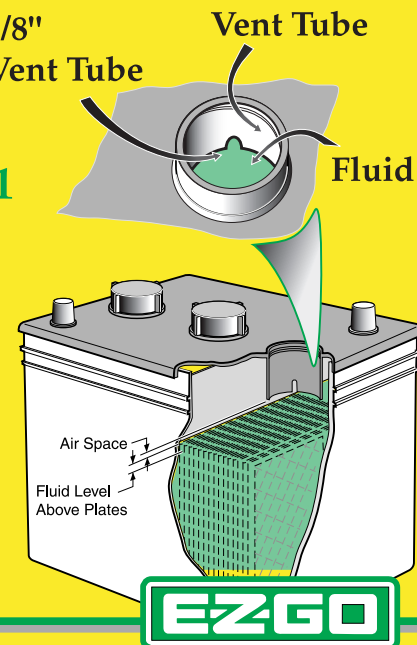

a TEXTRON Company